

User Guide

MEDIAGATE HD



MEDIAGATE HD



## USER GUIDE

<b>SAFETY AND OTHER INSTRUCTIONS</b>	<b>1</b>
<b>REMARKS</b>	<b>2</b>
<b>PRODUCT VIEW</b>	<b>2</b>
<b>ACCESSORIES</b>	<b>2</b>
<b>REMOTE CONTROL</b>	<b>3</b>
<b>PRODUCT USE</b>	<b>4</b>
<b>MEDIA PLAYBACK</b>	<b>6</b>
<b>SETUP MENU</b>	<b>8</b>
<b>SPECIFICATIONS</b>	<b>9</b>
<b>FAQ</b>	<b>9</b>



## SAFETY AND OTHER INSTRUCTIONS

Please use MediaGate HD carefully and read following instructions.

### >>> Copyright

Software, audio, video or any intellectual properties are protected by copyright and international laws.

It is user's responsibility when reproducing or distributing content(s).

### >>> Codec Check

This product may not support some media formats. Please check available codec types.

### >>> Data Backup

Please backup datas stored in this product in a safe place. We are not responsible for any data loss or damage.

### >>> Drop / Shock

Do not give shock or drop the MediaGate HD. This may damage it.

### >>> Foreign Substance

Do not insert any metal or inflammable foreign substances into player. This may damage it.

### >>> Disassembly / Modification

Do not attempt to disassemble or modify any part of MediaGate HD. This may damage it. Any product modification may void the warranty.

### >>> Load

Do not place any heavy object on the top of the MediaGate HD. This may damage it.

### >>> Chemicals

Do not clean product using chemicals cleaners. This may damage the MediaGate HD.

### >>> Water / Moisture

Do not contact the MediaGate HD with water or liquid.

This may cause fire or electric shock. If any conductive liquid enters, turn off the MediaGate HD and disconnect power adapter immediately.

### >>> Magnet or Magnetic Properties

Do not place the MediaGate HD near a magnetic field. This may cause a malfunction or damage stored data.

### >>> Heat

Do not place the MediaGate HD under direct sunlight or near a heat source. Do not keep it for long time in high temperature. This may damage it.

### >>> Vision / Hearing

Do not watch TV or hear loud sound for long time. This may cause vision or hearing problem.

### >>> Fire

During MediaGate HD use, if you detect smoke or unusual smell, turn off product, disconnect adapter immediately, and call the aftersales department if required.

### >>> Children

Do not let children touch the MediaGate HD. They may damage it.

### >>> Power

Do not use many electronic products with single outlet. Firmly insert power plug. When working, do not unplug.



## REMARKS

1. To facilitate file searches, the user is recommended to create 3 folders, respectively named “music”, “photo” and “movie” in the external device and then place the corresponding file into each folder. You could either select by media with icons or by explorer with “Explorer” icon.
2. As it is not possible to play all the media files, please choose the correct media file.

## PRODUCT VIEW




KEY	FUNCTION
Power supply	Connect to power
USB Host	Connect any USB device: external HDD, USB key, MP3 players, ...
3 in 1 card reader	Connect any SD / MMC / MS memory card
HDMI output	Connect to your TV with HDMI cable (not supplied)
AV output	Connect to your TV or audio system with composite AV cable (supplied) with scart adapter if necessary

## ACCESSORIES

N°	Item	Quantity
1	MediaGate	1
2	Remote Control	1
3	AV Cable	1
4	Scart adapter	1
5	USB Cable	1
6	Power Adapter	1
7	CD	1
8	Quick Starter Guide	1



## REMOTE CONTROL

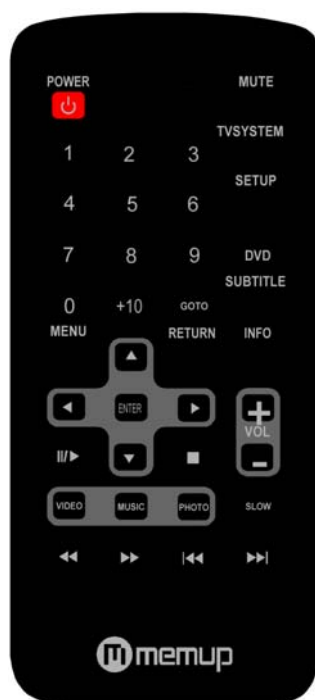

KEY	FUNCTION
<b>POWER</b>	Power ON/OFF
<b>MUTE</b>	Audio mute key
<b>GOTO</b>	Select Playback Time
<b>SLOW</b>	During playing, Press Slow key, the device will enter slow playback status, there are 3 selectable speeds 2x/4x/8x.Press ENTER key to return to normal playback
<b>TV SYSTEM</b>	Video output mode
<b>SUBTITLE</b>	Subtitle:SRT.SSA.ASS.SUB.ASS.PSB.TXT
<b>DVD</b>	DVD Navigation
<b>SETUP</b>	Enter menu setup, press again to return
<b>Play/Pause</b>	Play or Pause Button
<b>MENU</b>	Return to main menu
<b>RETURN</b>	Return to main menu or to Home
<b>▲</b>	Up picture rotation
<b>▼</b>	Down picture rotation
<b>Enter</b>	Enter to select to playback
<b>◀</b>	Left Key
<b>▶</b>	Right Key, Back to the last directory
<b>(VOL -)</b>	Left,( Decrease volume)
<b>(VOL+)</b>	Right,(Increase volume)
<b>Stop</b>	Stop
<b>REV</b>	Skip backward
<b>FWD</b>	Skip forward
<b>PREV</b>	Previous
<b>NEXT</b>	Next
<b>INFO</b>	File properties: display playback time when playing video
<b>VIDEO</b>	Shortcut key for Video menu
<b>MUSIC</b>	Shortcut key for Music menu
<b>PHOTO</b>	Shortcut key for Photo menu





## PRODUCT USE

### Connect composite AV cable

Make sure your MediaGate HD and TV are correctly plugged with a jack/RCA cable (included), using scart adapter if necessary.

Then, press [TV SYSTEM] button on MediaGate HD remote control to choose the AV output mode. The menu appears on TV if correct AV input is selected.



### HDMI mode

Make sure your MediaGate HD and TV are correctly plugged with an HDMI cable (not included).

Then, press [TV SYSTEM] button on MediaGate HD remote control to choose the HDMI output mode. The menu appears on TV if correct HDMI input is selected.





### USB Host

Once an USB device is connected, select folders in menu “Explorer” to display the content.



### Warning:

Some video playback can slow down if the bitrate is too high (over 7MB / s), indeed, data transfer is too high and is limited by the USB output.

### Card Reader

Once a memory card is connected, select folders in menu “Explorer” to display the content.





## MEDIA PLAYBACK

When you switch on MediaGate HD for the first time, you will find the main menu after a few seconds. Please use [◀] or [▶] to select the menu you want to enter between “VIDEO”, “MUSIC”, “PHOTO”, “SLIDE” and “EXPLORER”.



### Video Menu

Use [▲] or [▼] to select the file you want to play. Confirm your selection by pressing [Enter] button to play the file you want.

Only Video files will be displayed under “Video” Menu. Other media files such as Audio or Photo files won’t be displayed in this menu.



**Warning:** MediaGate HD needs a few seconds to load some video file with high bitrate for example. For large files, it may need more time, depending on file length and file settings.

Some media files such as WMV, ASF or MOV can’t be played with this device. Some AVI files may not be played also. Please use a Video Converter to convert those files into the specific media formats.

### Music Menu

Use [◀] or [▶] to select the menu you want to enter. Confirm your selection by pressing [Enter] button to play the file you want.

Only Audio files will be displayed under “Music” Menu. Other media files such as Video or Photo files won’t be displayed in this menu.







### Photo Menu

Use [◀] or [▶] to select the menu you want to enter. Confirm your selection by pressing [Enter] button to play the file you want.

Only Photo files will be displayed under “Photo” Menu. Other media files such as Video or Audio files won’t be displayed in this menu.



### Slide Menu

Please use [◀] or [▶] to select the menu you want to enter. After you enter one menu, please use [▲] or [▼] to select the file you want to play. When you confirm your selection, please press [Enter] to play the movie you want.

### Explorer

Use [▲] or [▼] to select the file you want to play. Confirm your selection by pressing [Enter] button to play the file you want. All kind of medias are displayed here with the different USB device folders.





## SETUP MENU

Press [SETUP] button of the MediaGate HD remote control, the following interface will appear :

### General settings

---

- OSD Lang: Select the language to display the SETUP MENU, information and Movie subtitle.  
Screen Saver Control the screen saver.  
Rom Version: Check the software version.

### Audio setup

---

- Downmix: Select Right/Left stereo  
Audio Out: Select the Audio quality between Analog / SPDIF RAW and SPDIF PCM (default)  
LPCM Output: High Audio Quality selected

### Video setup

---

- TV Display: Screen display control  
TV Type: TV Norm display control  
Video Output: Video output mode control. Select between: CVBS (for AV output) / 720p and 1080i (for HDMI output)

### Preferences setup

---

- Defaults: When this function is activated, all settings will be reset to factory defaults.  
Slide Time: Playback interval time  
Slide Mode: Select Playback effect mode  
Note: No transition effect with 720p & 1080i in Slideshow Menu  
Photo Digest: Switch between preview and playback list  
Power Resume: Standby

Once you set your preferences, press [Setup] button to go back to main menu.



## SPECIFICATIONS

### CONTENT FORMAT SUPPORTED:

Video:	MPEG1/2/4, XVID, VCD, DVD files
Format:	AVI / MPG / MPEG / DAT / VOB
Photos:	JPEG
Audio:	MP3 / WMA / AAC / AC3 / OGG
Memory card supported:	SD / MMC / MS (FAT16 or FAT32)
Subtitles:	SRT, SSA, ASS, SUB, PSB, TXT

### VIDEO OUTPUT SPECIFICATION

Image Resolution	720*480 (NTSC, YPbPr) / 720*576(PAL, YPbPr) / 1920 x 1080i
------------------	--

### CONNECTIONS

USB host port	USB full speed port x 1
Supported HDD	NTFS/FAT32
Video Output	HDMI, Jack/RCA Connector (yellow end) x 1
Audio L/R	HDMI, Jack/RCA Connector (white/red ends) x 1

### GENERAL

Power Supply	AC 100~240V - 50~60Hz
Power	Approx. 10 W
Operating	+5°C to +40°C (+36°F to +104°F)
Operating Humidity	5% to 80% RH
Dimensions (W/H/D)	L11,6 cm X H2 cm X P7,1 cm
Net Weight	Approx. 82 grs

**Note:** The specifications and design of this product are subject to change without any notice

## FAQ (FREQUENTLY ASKED QUESTIONS)

### Q: When power is on, nothing appears or screen is shaking?

A: Video output mode is not properly set, press [TV SYSTEM] on remote control to change output mode until it is properly set.

### Q : It works well, but the data transfer speed is very slow, why?

A : Please check the USB port version of your computer.

### Q: My file slow down when I read it with the USB Host?

A: Some files require a lot of resources, reading files with a too high bitrate are limited by the USB connection and data transfer.

However, once copied into the hard drive, playback is smoother.